


1363088
SHEET 2 OF 2
3-22-65

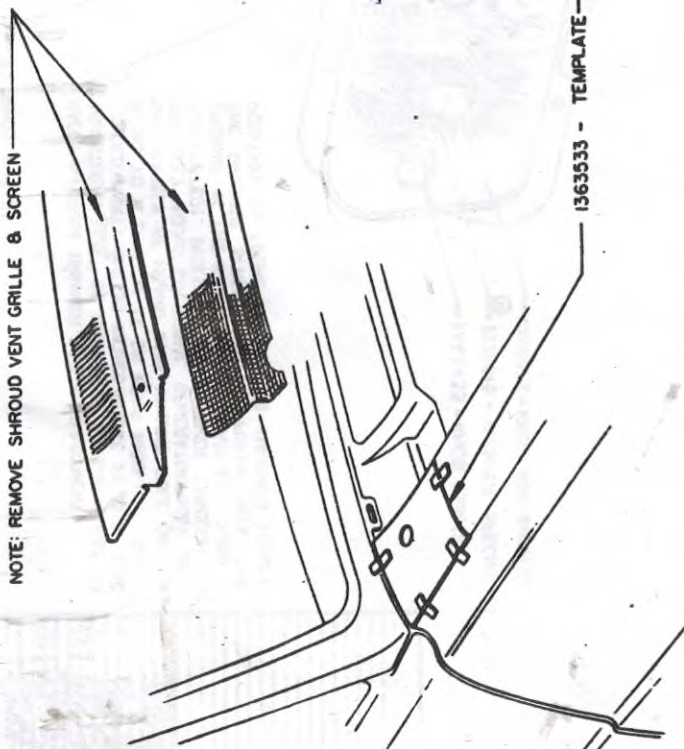

1363533 - TEMPLATE -

1. TAPE TEMPLATE TO RIGHT HAND FENDER AS SHOWN. DRILL HOLE THROUGH FENDER.
2. REMOVE SHROUD VENT GRILLE & SCREEN.
3. PRY OUT AND DISCARD SEAL IN SHROUD DIRECTLY BELOW THE DRILLED HOLE IN THE FENDER.
4. ASSEMBLE ANTENNA BASE & LEAD ASSEMBLY TO SHROUD.
5. PRY OUT AND DISCARD SEAL IN CENTER DUCT & ROUTE LEAD IN CABLE THRU HOLE TO RADIO - MAKING CERTAIN THAT GROMMET ON CABLE IS PROPERLY SEATED.
6. COMPLETE INSTALLATION OF OUTBOARD PARTS.

(b)

ALIGN THIS EDGE
ALONG REAR EDGE
OF FENDER

#1363533-TEMPLATE
FOR ANTENNA LOCA-
TION ON FRONT FEN-
DER R.H.

DO NOT REDUCE, FULL SIZE OF TEMPLATE MUST BE MAINTAINED


FACTORY INSTRUCTIONS:

- ① MOUNT BASE & LEAD IN ASSEMBLY AND SPACER TO SHROUD BEFORE ASSEMBLING FENDER.

[illegible][illegible]

1363088
SHEET 2 OF 2

ANTENNA INSTALLATION
SHEET 2
1363088 OF 2 SHEETS

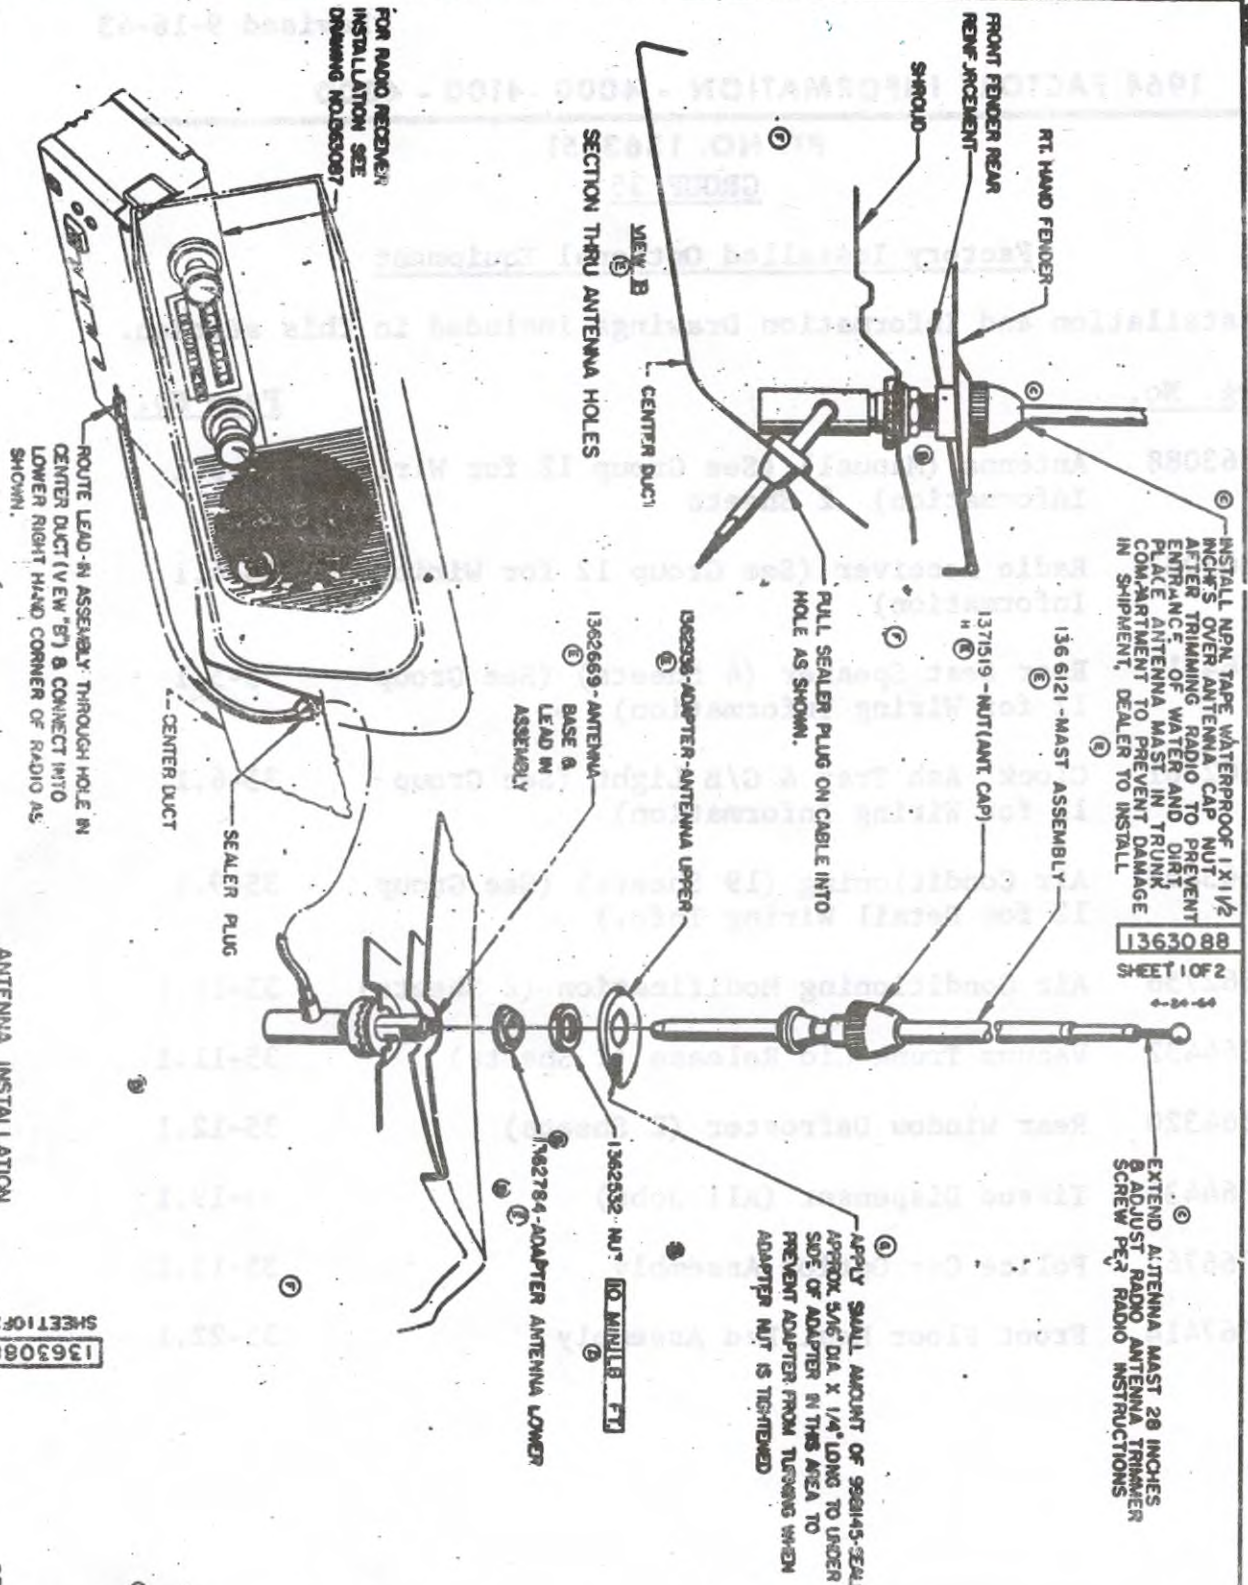

INSTALL NPN TAPE WATERPROOF 1X1/2 INCHES OVER ANTENNA CAP NUT AFTER TRIMMING RADIO TO PREVENT ENTRANCES OF WATER AND DIRT. PLACE ANTENNA MAST IN TRUNK COMPARTMENT TO PREVENT DAMAGE IN SHIPMENT. DEALER TO INSTALL.


1363088
SHEET 1 OF 2

②
-EXTEND A: ANTENNA MAST 28 INCHES
-B ADJUST RADIO ANTENNA TRIMMER
-SCREW PER RADIO INSTRUCTIONS

⑥ APPLY SMALL AMOUNT OF 998145-SEAL
APPROX 5/16" DIA. X 1/4" LONG TO UNDER
SIDE OF ADAPTER IN THIS AREA TO
PREVENT ADAPTER FROM TURNING WHEN
ADAPTER NUT IS TIGHTENED

FOR HALL PLUMB IN CAR BODY
THEN RADIO IS NOT SPECTED
SEE 1302878 BEEET 1-DASH
UNITS & FRONT FLOOR SIGVAL.

[illegible]

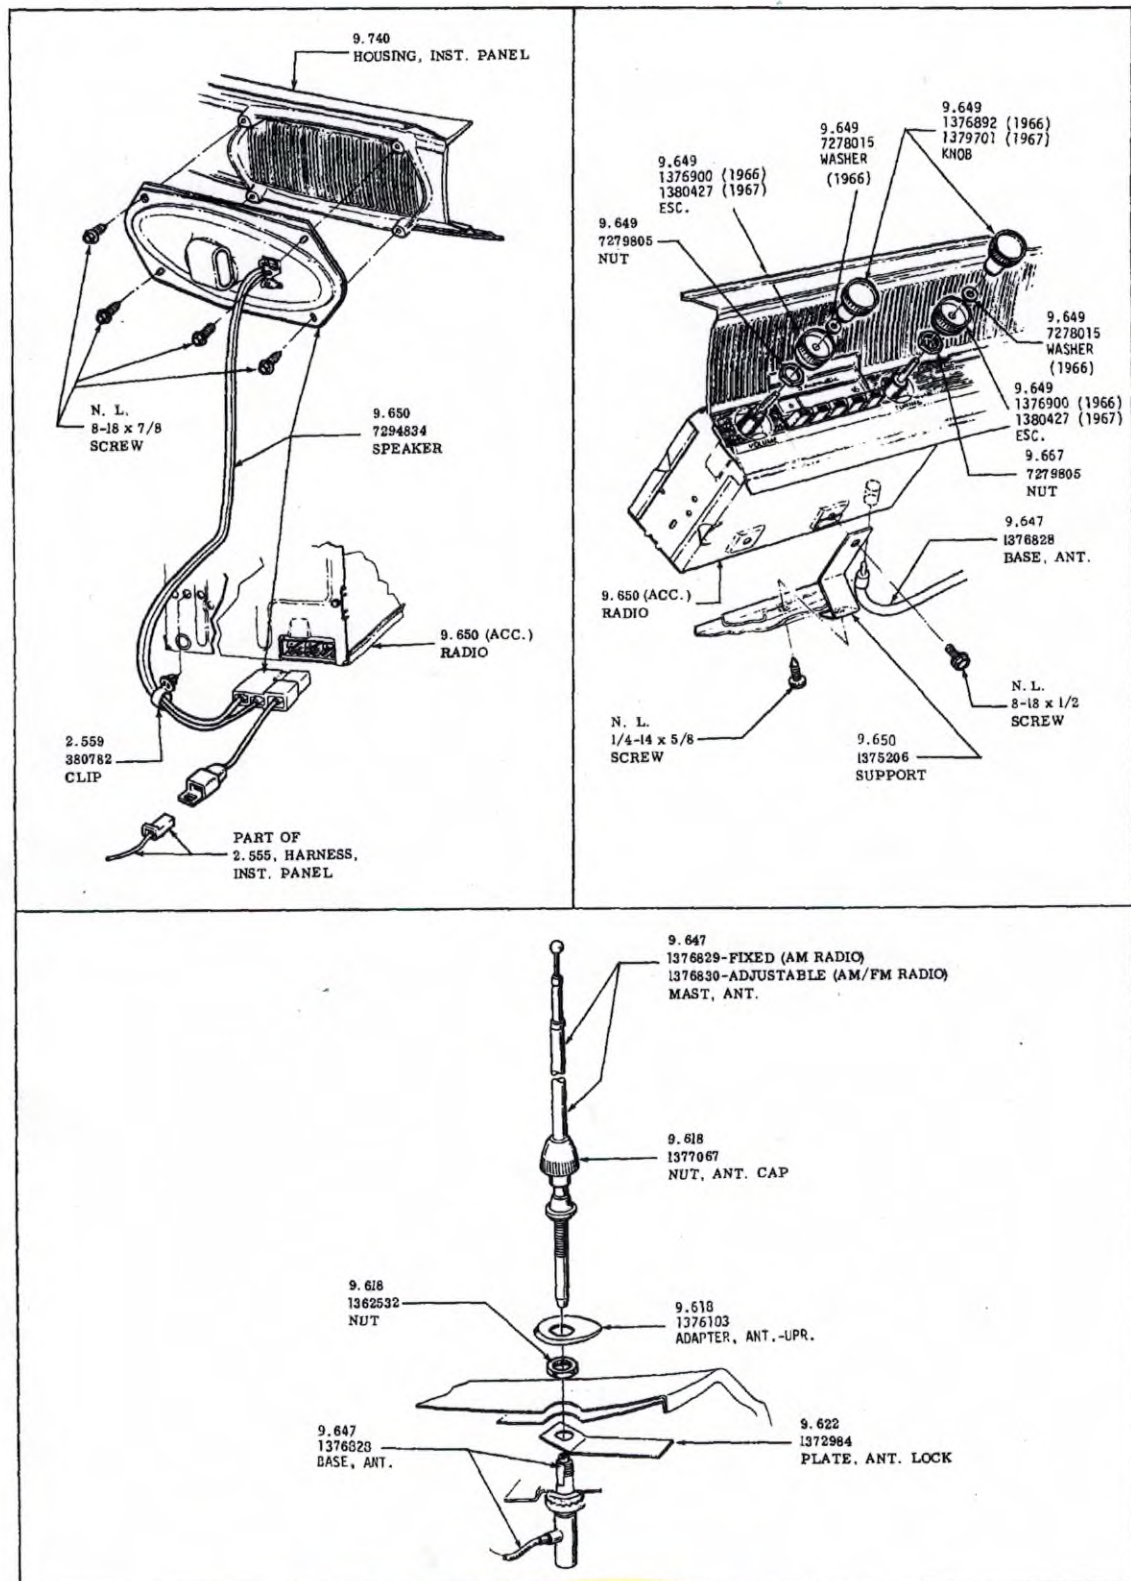

RADIO AND ANTENNA
1966-1967-SPECIAL-SKYLARK-SKYLARK GRAN SPORT

1965 = 1362689?